



KERN & Sohn GmbH

Ziegelei 1
72336 Balingen-Frommern
Germany

☎ +0049-[0]7433-9933-0
FAX +0049-[0]7433-9933-149
✉ info@kern-sohn.com

Operating manual KERN Interface Adapter with Cable for USB_Host/Master

KERN YKUP-02

Type TYKUP-02-A
Version 1.0
2021-09
GB



You will find the current version of these instructions also online under:
<https://www.kern-sohn.com/shop/de/DOWNLOADS/>
under the column Operating instructions

TYKUP-02-A-BA-e-2110_USB_HostMaster



KERN Interface Adapter with Cable

Version 1.0 2021-09

Installation Instructions for USB_Host/Master

Cable length: 1.5 m

i	<ul style="list-style-type: none">• Only KERN KUP-adapters may be connected to the 15-pol-sub-D-plug of the device!• Using the KUP adapter, data of the device may be exported to an USB data carrier.
----------	--

Installation:

- ⇒ Switch off the device
- ⇒ Plug in the KUP adapter (USB_Host/Master) at the 15-pol-sub-D-plug of the device
- ⇒ Switch on device
 - The KUP adapter is automatically recognised by the balance